


ALTAIR
FASHION BATHROOM LIFE

Installation Manual for Bathroom Mirror



(Suitable for the products installation by hanging bar or hardy hold)

750028-MIR-GT

Exploded view

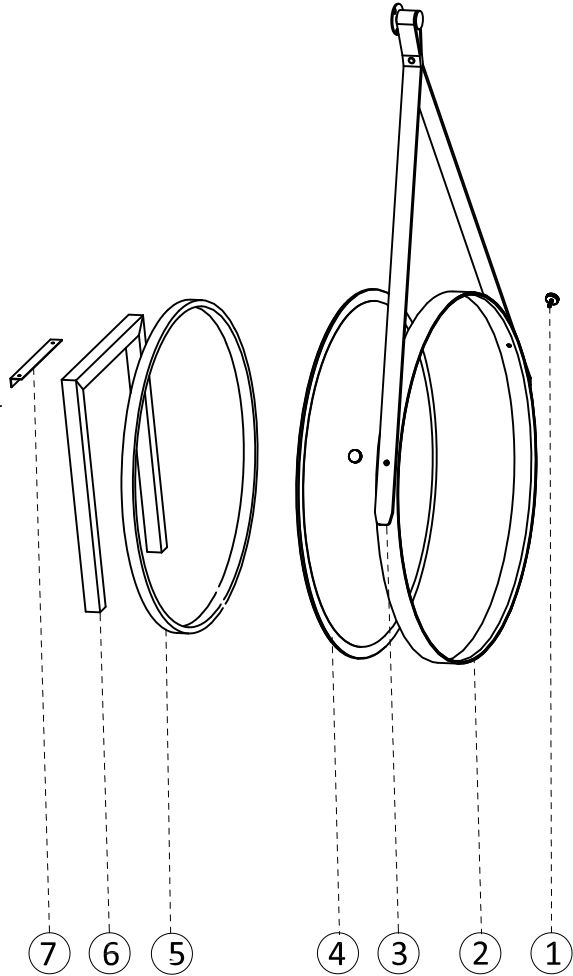

Part	Description
1	Screw
2	Aluminum Frame
3	Belt
4	Mirror
5	EVA
6	Aluminium Frame
7	Hanging Bracket

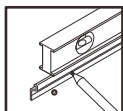
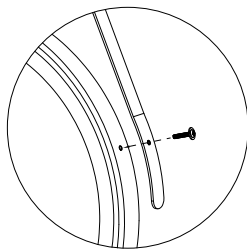


①


Fix the belt with screws in the screw holes on both sides of the mirror frame (as shown in the picture)

②

Horizontal the hanging bar mark with a pen in the hanging bar hole

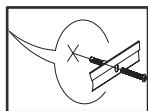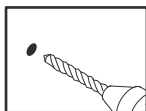

A

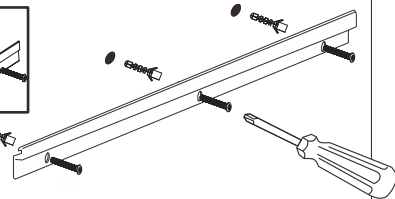


③




To use the drill to have the holes

④ (A just apply to the solid wall)

Put the expansion plug into the wall hole both the wall holes and the hanging bar holes are match. to use the screwdriver to make the screw tightly

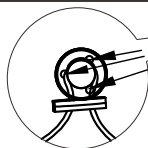

remark the belt hook hole with pencil

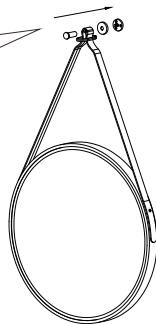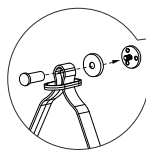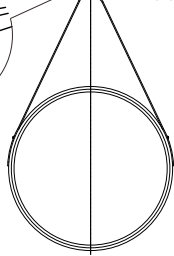


⑤



Hang well the mirror, straighten the belt, mark the hook hole of the belt with a pencil, and then punch the hole and fix well the base on the wall

⑥

install hook fitting and the belt(as see picture)

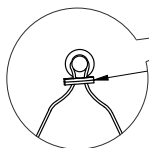

adjust the belt buckle

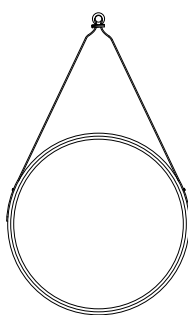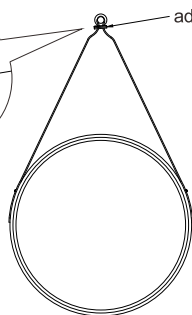


⑦

adjust the belt buckle(as see picture)


⑧

test the functions


parts list

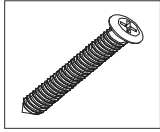


M4 screw

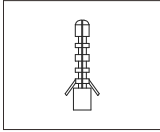


D6 expansion screw

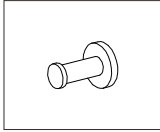


Hook

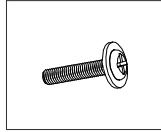

The screw for the belt

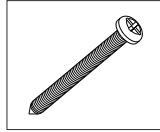


M4 screw

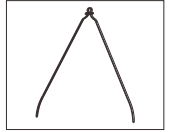


The belt


Installation tools (as shown below)

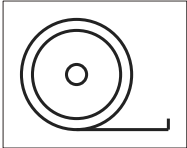


Flexible rule

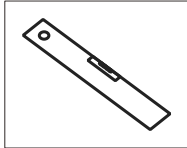


Leveling instrument

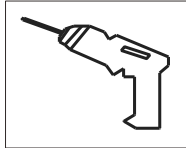

Churn drill

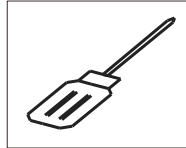

Screwdriver

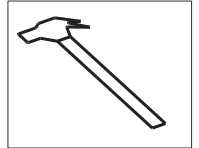

Hammer

Warm tips:

- 1、 Please do not use,if the product have any borken.
- 2、 During operation,never put hard and sharp materials directly against the mirror surface.